 
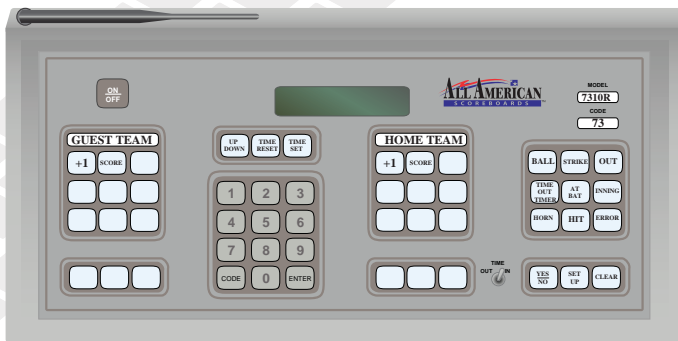 


ALL AMERICAN SCOREBOARDS™

MP-7310 Baseball Scoreboards

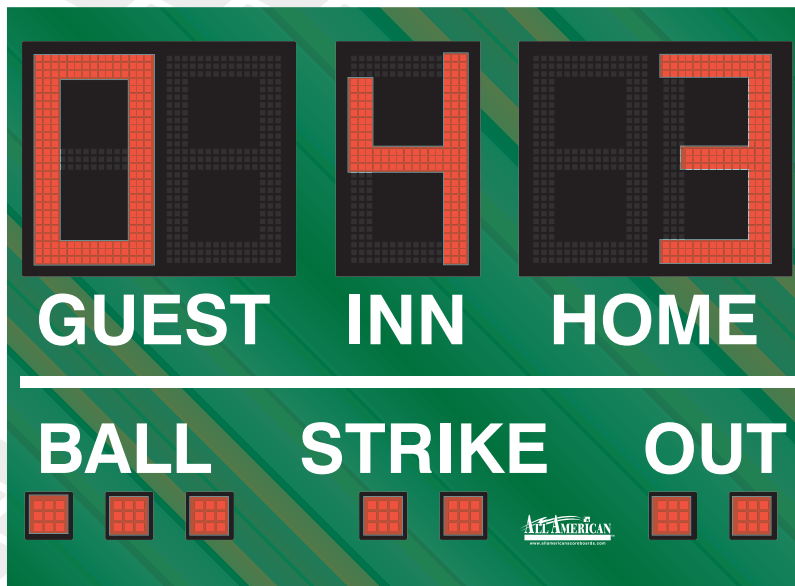

Operator's Manual

Rev. 5/1/08

Table of Contents

| | |
|---|----------|
| Table of Contents..... | 2 |
| 1.0 Keypad Console..... | 3 |
| 2.0 Keypad Console Functions..... | 4 |
| 2.1 Initializing the System at Start-up. | 4 |
| 2.2 Set Up Brightness and Dimming..... | 4 |
| 2.3 Scores..... | 4 |
| 2.4 Innings | 4 |
| 2.5 Balls, Strikes and Outs..... | 4 |
| 2.6 Hits, Errors and At Bat | 4 |
| 3.0 Maintenance/ Troubleshooting..... | 5 |
| 3.1 Table I: Quick Reference Problem/Cause..... | 5 |
| 4.0 Safety..... | 6 |
| 5.0 Warranty..... | 7 |
| 6.0 Technical Support..... | 8 |
| 6.1 Customer Service | 8 |
| 6.2 Contact Information..... | 8 |

Manual Overview

This manual is intended for the use of the All American Scoreboard owners and users. Read this manual carefully before starting the equipment.

This manual contains important information for operation and maintenance of the equipment. It also contains important instructions to prevent accidents, personal injury and/or serious damage prior to or during operation of the equipment.

Familiarize yourself thoroughly with the function and operation of this equipment and strictly observe the directions given. If you have any questions or need further details on specific aspects related to the AAS system, please do not hesitate to contact us.

In this manual you will find three levels of flagged notes or warnings.



WARNING! THE WARNING MESSAGE IS USED WHEN A LIFE THREATENING SITUATION MAY ARISE OR PERSONAL INJURY CAN RESULT.



CAUTION! The caution message is used when there is a danger of damage to the equipment, materials, or other important information; such as Warranty issues.

NOTE: The Note message is used to give operational information and useful tips.

1.0 Keypad Console

The Keypad Console has a touch sensitive keypad that allows the operator to enter all pertinent information, It then sends the information to the Controller Assembly within the sign by way of radio signal or hard-wire. A LCD screen displays Scores, Innings, Balls, Strikes and Outs, and depending on the board model Hits and Errors. There are two styles of Keypad consoles. The Keypad you have will depend on the model of Scoreboard and interface system you have.



CAUTION: To protect the console from damage, it is advisable to disconnect the console and store in a dry secure area when not in use.



Figure 2A



Figure 2B

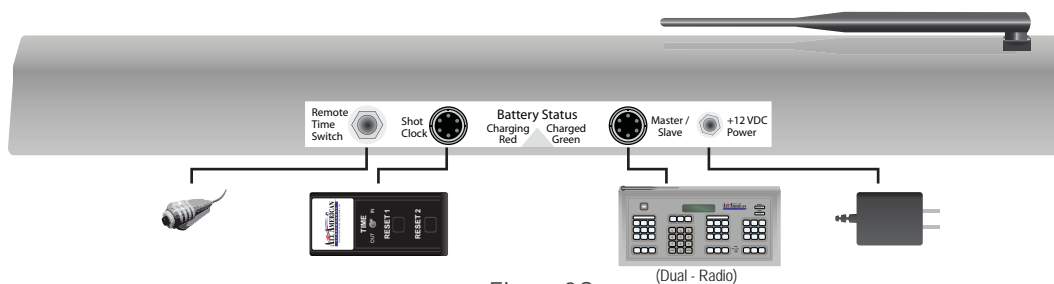 


Figure 2C

NOTE: To operate dual signs with a radio unit, a second console must be turned on and connected to the MASTER/SLAVE output via a dual radio console cable (item # 151733). The second console will only be used to transmit information.

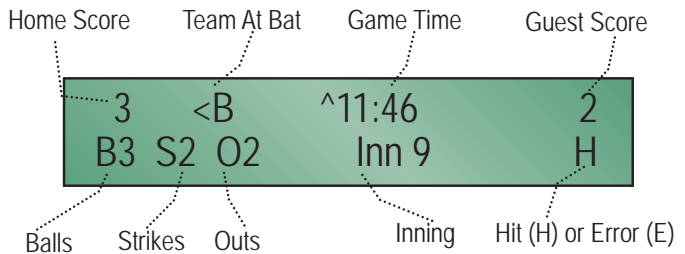 






Figure 3. Typical Game-Time LCD Game Display & Definitions

2.0 Keypad Console Functions

 


 
Turn On the Keypad console press . The LCD screen should become active.


2.1 Initializing the System at every Start-up.

To do this, locate the Code label on the Keypad Console (located upper right corner in Figure 2A and bottom middle in Figure 2B); the code 73 is used for illustration. Press  the code   then . The LCD should change. The scoreboard will light up as follows: Guest=0, Inning=1, Home=0

2.2 Set Up Brightness and Dimming

Keypad in Figure 2A only:

Press  will start the dimming option, the LCD will display Dimming 1 to 4 levels of brightness, with 4 being the brightest. Press  (1, 2, 3 or 4) then  then .

 
Press  to go through the steps of Set Up (most are not used for Baseball). Set brightness levels of the LEDs from 1-4, 1 being the lowest setting and 4 being the brightest setting.




Keypad in Figure 2B only:


 
Pressing  once will change the brightness/dimming one step through 4 levels of brightness.

2.3 Scores

The Home and Guest Scores can be changed in two ways.

1. Press  under either Home or Guest Scores to increase the score by 1 number.
2. To enter or change a score using the numeric keypad under Home or Guest press

 then enter the score ( will change the score to 2) then press .




To Clear a score, under Home or Guest press  then .

2.4 Innings

Press  then, using the numeric keypad, press the inning number and press .

To Clear Inning display press  then .

2.5 Balls, Strikes and Outs

Change this display by pressing  or  or . Each time a button is pressed the display will increase one; 1 to 2, 2 to 3 and so on.

2.6 Hit, Error and At Bat

Push  or  to increment the appropriate indicator. Press  to toggle between the team at bat (displayed only on the console).

3.0 Maintenance & Troubleshooting

For cleaning, use a window type product with a soft cotton cloth.



CAUTION: Do not use a power washer, solvent product or abrasive materials for cleaning board faces.

3.1 Table I: Quick Reference Problem/Cause



WARNING! USE A LOCK OUT/TAG OUT ON CIRCUIT BREAKERS OR "POWER ON/OFF" SWITCHES WHEN PERFORMING INSTALLATION, REPAIRS OR MAINTENANCE.

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|--|--|---|
| Scoreboard doesn't light and Console doesn't work | No power to the Scoreboard | Check that the main circuit breaker is on. |
| | | Check to make sure the console and scoreboard are plugged into an outlet. |
| Scoreboard Digits don't light (Console Works) | No power out of the controller assembly to the board | Check to make sure the scoreboard is plugged into an outlet. |
| | | Check to make sure a circuit breaker did not get blown. |
| Digits light, Console works, but, no control of the Scoreboard | No data signal established | Turn off the Scoreboard and the Console and turn the Scoreboard on then the Console. Retry coding Console. |
| | Low battery (Wireless Consoles) | Be sure the battery is charged (if so equipped), or try the wall transformer to power the Console. |
| | No RF signal established (Wireless Consoles) | Take Console 10 to 25 feet from the Scoreboard and test again. Check antenna connections and tighten if necessary, both in the Scoreboard and in the Console. CAUTION: the antenna connection at the radio can be easily broken. Push or pull the connector STRAIGHT on or off! |
| Scoreboard works, but some lights stay on all the time | Short in Digit circuit | Call technical support |
| The Scoreboard works, but some lights do not come on or blink | Bad Connection | Call technical support |
| | Bad Driver or Digit Board | Call technical support |



WARNING! OPERATION OF THE UNIT WITH THE ELECTRICAL EXPOSED IS DANGEROUS. BE SURE ALL TOOLS AND ANY OTHER MATERIALS ARE REMOVED FROM THE UNIT, AND ALL ACCESS COVERS ARE REPLACED AND CLOSED BEFORE POWER IS TURNED ON.

NOTE: For Advanced Trouble Shooting, Service Manuals and Replacement Part Information go to www.allamericanscoreboards.com.

4.0 Safety Information

The owner of the All American Scoreboard is responsible for safe operation and repair. He therefore is obliged to familiarize operating personnel with the contents of this manual and make them aware of all possible hazards.

NOTE: When using this equipment, always follow the manufacturer's instructions for safe operation. In case of emergency, please telephone Technical Support or a qualified service technician.

Do not operate the sign until it is completely assembled and installed per the instructions supplied by AAS.

AAS recommends that your main power be installed by a licensed electrician in accordance with the local building and electrical codes.

All equipment must be grounded in accordance with the local building and electrical codes. AAS recommends Earth Link Ground.

If any part of the Scoreboard equipment is malfunctioning or has been damaged, cease operation and consult with AAS Technical Support or qualified service technician before further use.

Use only AAS specified or recommended replacements parts.



WARNING! USE A LOCK OUT/TAG OUT ON CIRCUIT BREAKERS OR "POWER ON/OFF" SWITCHES WHEN PERFORMING INSTALLATION, REPAIRS OR MAINTENANCE.

When performing repairs be mindful of the weather and work area conditions. Avoid the unit's exposure to the elements, water and debris, or anything that may be dangerous or cause damage to the equipment.



WARNING! OPERATION OF THE UNIT WITH THE ELECTRICAL CIRCUITRY EXPOSED IS DANGEROUS. BE SURE ALL TOOLS AND ANY OTHER MATERIALS ARE REMOVED FROM THE UNIT, AND ALL ACCESS COVERS ARE REPLACED AND CLOSED BEFORE POWER IS TURNED ON.



CAUTION: Use of solvent cleaners or a power washer on your Scoreboard may cause permanent damage.

5.0 Warranty

Five Year Limited Warranty

Non-compliance with procedures of Installation, Safety, Operation and/or Maintenance practices defined in this manual may result in a Warranty issue.

This warranty extends to and is enforceable by only the original consumer purchaser and only for the period (during the applicable term) which the product remains in the possession of the original consumer purchaser. "Original consumer purchaser" means the person who first purchased the product covered by this warranty other than for purpose of resale. This warranty does not apply if it is found that at *any time* the equipment has not been used for its intended purpose.

NOTE: Please ask your dealer, distributor or sales representative for details.



CAUTION! Any unauthorized changes or modifications to this unit without our prior written approval will void the user's warranty and will transfer health and safety obligations to the user



CAUTION! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a class "A" Digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with Owner's Manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area can cause harmful interference in which case the user will be required to correct the interference at their expense.

© Copyright All American Scoreboards 2006

This is the exclusive property of All American Scoreboards® a division of Everbrite® LLC. Use of or duplication of this document in any manner without the expressed written consent of All American Scoreboards® is prohibited.

The information contained in this document is subject to change without notice and should not be construed as a commitment by All American Scoreboards®.

All American Scoreboards® assumes no responsibility for any errors that may appear in this document. Nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

All American Scoreboards® shall not be liable for incidental or consequential damages in connection with, or arising out of the furnishing, performance, or use of this document and the program material, which it describes.

Trademarks Credits

All American Scoreboards® is a registered trademark of Everbrite® LLC.

Everbrite® is a registered trademark of AAS LLC.

6.0 Technical Support

6.1 Customer Service

Customer satisfaction is the top priority at AAS. Our skilled, experienced Account Management teams are dedicated to providing highly responsive service through all phases of our client's programs.

These teams are computer-linked to each of our manufacturing facilities to provide "on-line" updates on the status of customer orders. Furthermore, AAS's EDI capabilities allow electronic interchange to efficiently process customer orders.

6.2 Contact Information

All American Scoreboards
401 S. Main Street
P.O. Box 100
Pardeeville, WI 53954
PHONE: 1 800-356-8146
FAX: 1 608-429 -9216

www.allamericanscoreboards.com